

F1 F2 F4 D/T

FRESNEL FIXTURES - DAYLIGHT/TUNGSTEN
DMX CONTROL TABLE



1CH	2CH 16Bit	2CH Strobe	3CH	Function	Values		
1	1	1	1	Dimmer	000	-	255 0% to 100%
	2			Dimmer fine	000	-	255 0% to 100%
		2	2	Strobe	000	-	005 Strobe open
					006	-	010 Strobe closed
					011	-	033 Pulse Random, slow -> fast
					034	-	056 Ramp up Random, slow -> fast
					057	-	079 Ramp down Random, slow -> fast
					080	-	102 Random Strobe Effect, slow -> fast
					103	-	127 Strobe Break Effect, 5s.....1s (short burst with break)
					128	-	250 Strobe slow -> fast <1Hz - 20Hz
				251	-	255 Strobe open	
			3	Dimmer response	000	-	005 No function
					006	-	127 Dimmer Response LED (hold 5s, save)
					128	-	191 Dimmer Response Halogen (hold 5s, save)
					192	-	255 No function

4CH	5CH	Function	Values			
1	1	Dimmer	000	-	255	0% to 100%
	2	Dimmer fine	000	-	255	0% to 100%
	3	Strobe	000	-	005	Strobe open
			006	-	010	Strobe closed
			011	-	033	Pulse Random, slow -> fast
			034	-	056	Ramp up Random, slow -> fast
			057	-	079	Ramp down Random, slow -> fast
			080	-	102	Random Strobe Effect, slow -> fast
			103	-	127	Strobe Break Effect, 5s.....1s (short burst with break)
	3	Strobe	128	-	250	Strobe slow -> fast <1Hz - 20Hz
			251	-	255	Strobe open
	4	Dimmer curve	000	-	005	No function
			006	-	063	Linear Dimmer Curve
			064	-	127	Exponential Dimmer Curve
			128	-	191	Logarithmic Dimmer Curve
			192	-	255	S-Curve Dimmer Curve

F1 F2 F4 D/T

FRESNEL FIXTURES - DAYLIGHT/TUNGSTEN
DMX CONTROL TABLE



4	5	Device settings (please read remark 1*)	000	-	005	No function
			006	-	127	Dimmer Response LED (hold 5s)
			128	-	191	Dimmer Response Halogen (hold 5s)
			192	-	196	Fan Auto (hold 5s)
			197	-	201	Fan Off (hold 3s)
			202	-	206	Fan Constant Low (hold 3s)
			207	-	211	Fan Constant Medium (hold 3s)
			212	-	218	Fan Constant High (hold 3s)
			219	-	223	LED PWM Frequency 800 Hz (hold 5s)
			224	-	228	LED PWM Frequency 1200 Hz (hold 5s)
			229	-	233	LED PWM Frequency 2000 Hz (hold 5s)
			234	-	238	LED PWM Frequency 3600 Hz (hold 5s)
			239	-	243	LED PWM Frequency 12 kHz (hold 5s)
			244	-	249	LED PWM Frequency 25 kHz (hold 5s)
			250	-	255	No function

EN: (1*) After the adjustments have been made, set the value to 000 to avoid disturbance by endless function call.

DE: (1*) Nachdem die Einstellungen vorgenommen wurden, stellen Sie den Wert auf 000 ein, um Störungen durch endlosen Funktionsaufruf zu vermeiden.

FR: (1*) Une fois les ajustements effectués, réglez la valeur sur 000 pour éviter les perturbations par appel de fonction sans fin.

ES: (1*) Después de realizar los ajustes, establezca el valor en 000 para evitar perturbaciones mediante una llamada de función sin fin.

PL: (1*) Po dokonaniu ustawień ustaw wartość na 000, aby uniknąć zakłóceń przez niekończące się wywołanie funkcji.

IT: (1*) Dopo aver effettuato le regolazioni, impostare il valore su 000 per evitare disturbi causati da una chiamata a funzione infinita.